[Faulty model] iPad 3

[Fault phenomenon] Customer description No Power ON screen is not displayed, the plug charger does not respond.

[Maintenance process] Disassemble the equipment and connect the current meter to the high current meter.

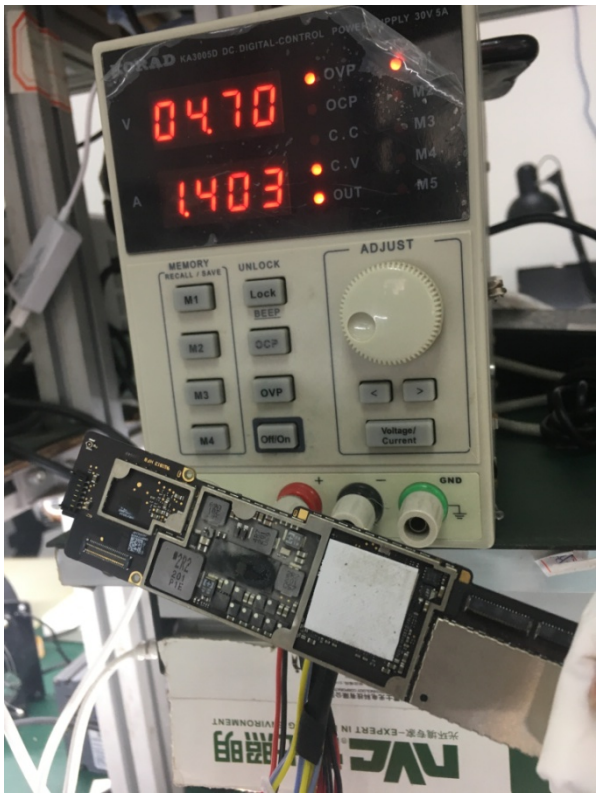

The motherboard power chip position is smoked on the Colophony (Solder) and the power ic is damaged. Use a heat gun to remove the power and handle the vinyl on the bottom of the solder pad. Install a new power supply ic press the power button to trigger a normal boot.

