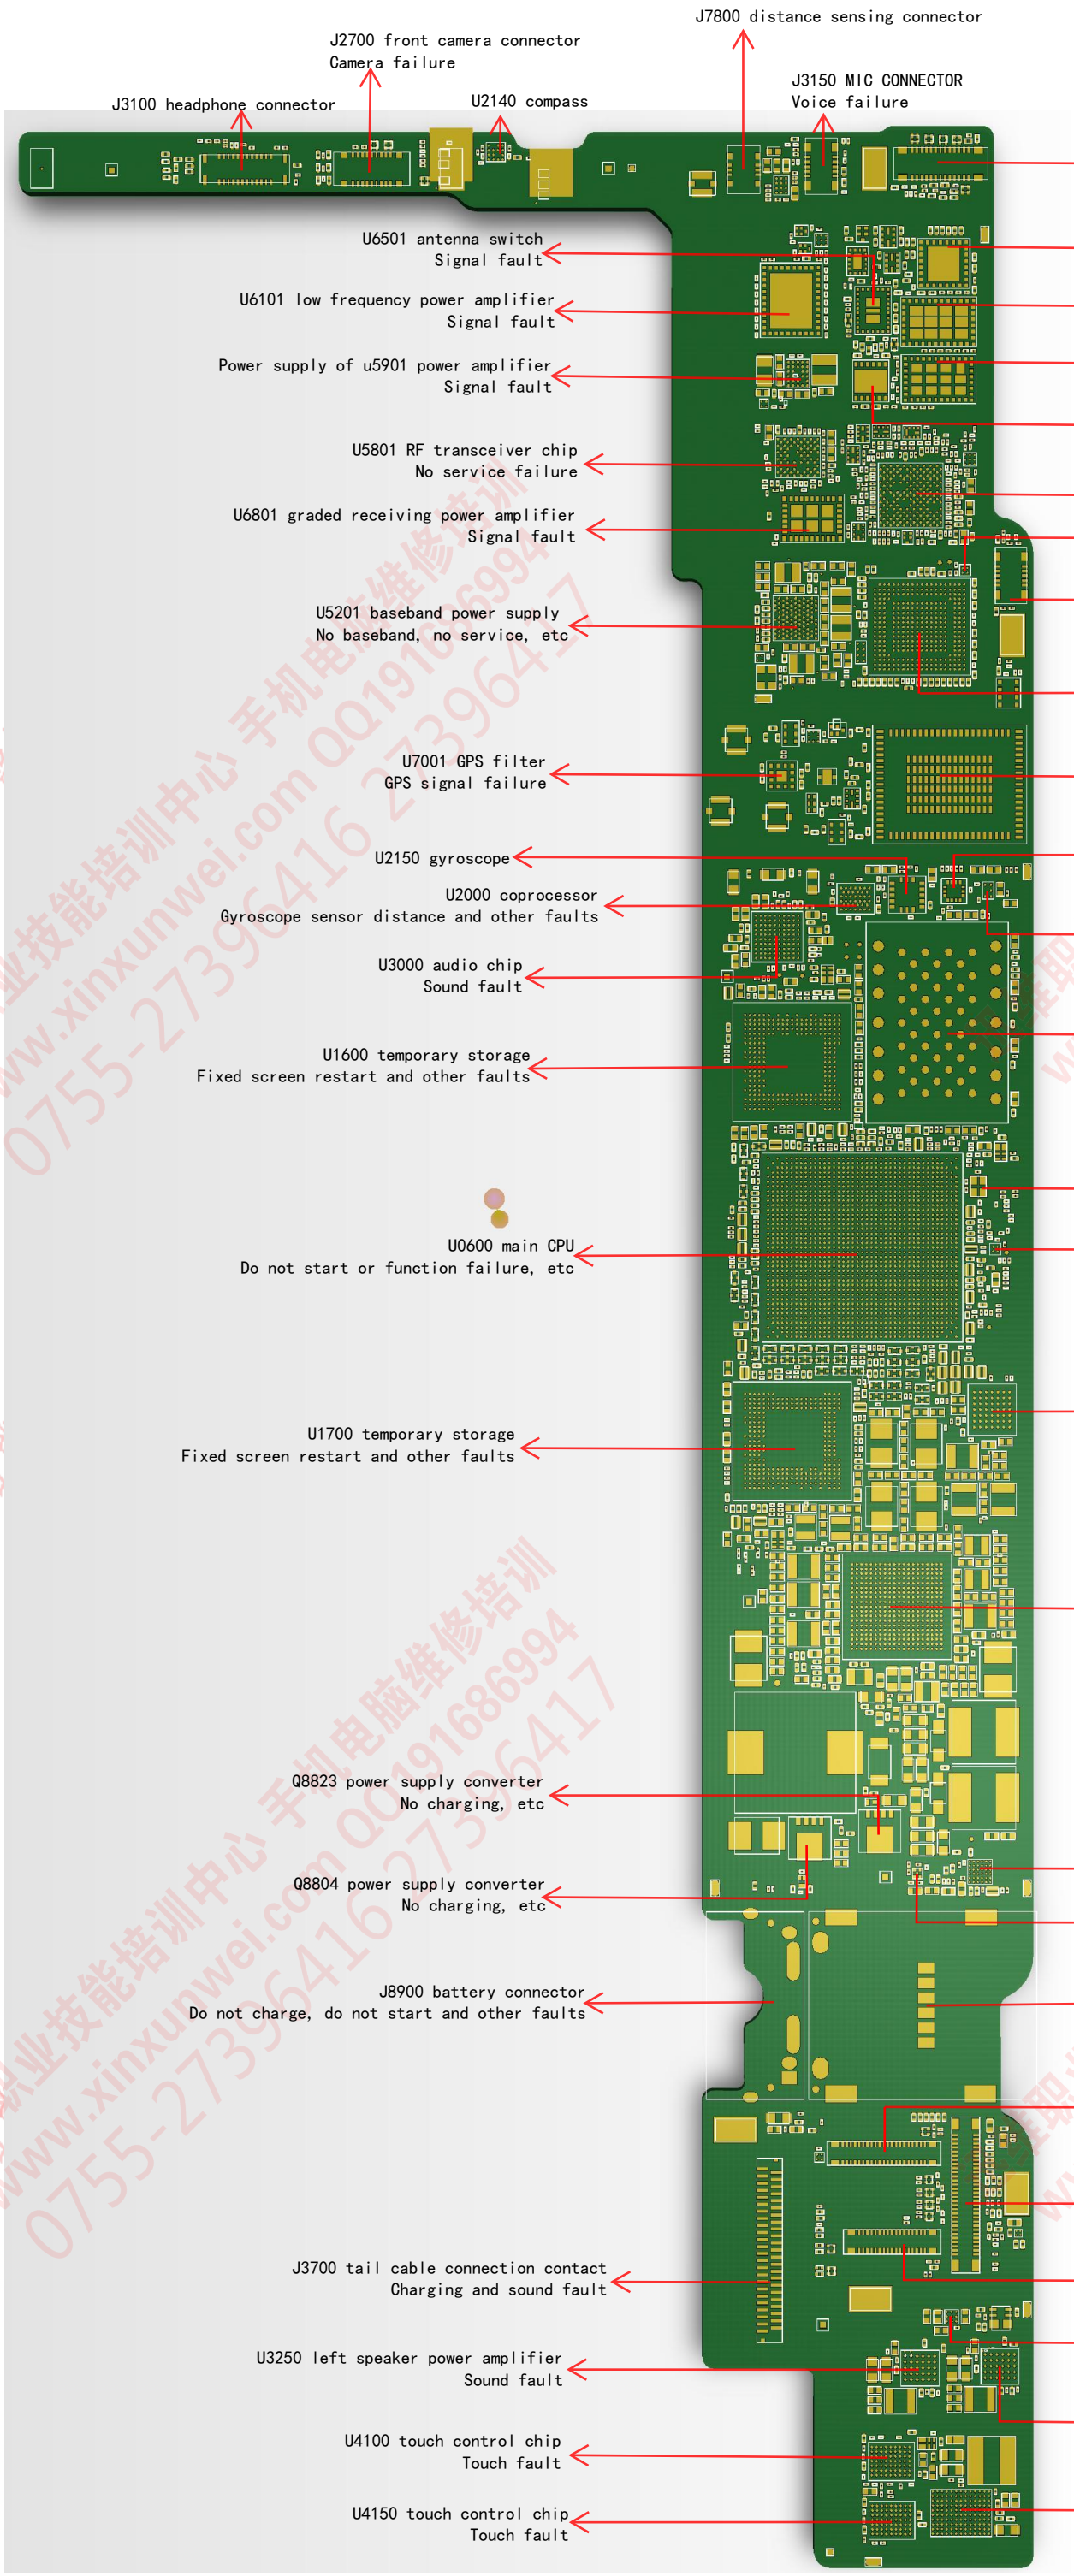
J7800 distance sensing connector
J2700 front camera connector
Camera failure
J3150 MIC CONNECTOR
Voice failure
J3100 headphone connector
U2140 compass
J2701 rear camera connector
Camera failure
U6501 antenna switch
Signal fault
U6401 high frequency power amplifier
Signal fault
U6101 low frequency power amplifier
Signal fault
U6301 if power amplifier
Signal fault
Power supply of u5901 power amplifier
Signal fault
U6202 low frequency power amplifier
Signal fault
U6002 2G power amplifier
Signal fault
U5801 RF transceiver chip
No service failure
U5601 RF transceiver chip
No service failure
U6801 graded receiving power amplifier
Signal fault
U5403 baseband chip
Unable to activate fault
J3910 volume key connector
Sound regulation failure
U5201 baseband power supply
No baseband, no service, etc
U5401 baseband CPU
No service, no baseband, unable to activate fault
U7001 GPS filter
GPS signal failure
U7500 WiFi Bluetooth chip
WiFi Bluetooth failure
U2150 gyroscope
U2180 accelerator
U2000 coprocessor
Gyroscope sensor distance and other faults
U7503 comparator
WiFi Bluetooth failure
U3000 audio chip
Sound fault
U1800 hard disk
Power on fixed screen and other faults
U1600 temporary storage
Fixed screen restart and other faults
Y0600 24m crystal oscillator
Failure such as not starting up
U0600 main CPU
Do not start or function failure, etc
U0790 logic chip
Restart and other faults
U4800 NFC chip
NFC fault, brush machine error 56, etc
U1700 temporary storage
Fixed screen restart and other faults
Main power management chip of u8100
No power on, no charging, etc
Q8823 power supply converter
No charging, etc
U3500 USB management
Do not online, do not charge, restart and other failures
Q8804 power supply converter
No charging, etc
U7900 SIM card control chip
Card unread failure
J8900 battery connector
Do not charge, do not start and other faults
J7900 SIM card slot
Card unread failure
J4020 touch connector
Touch fault
J4500 display connector
No backlight, no display failure
J3700 tail cable connection contact
Charging and sound fault
J4040 touch connector
Touch fault
U4770 fingerprint power supply chip
Fingerprint fault
U3250 left speaker power amplifier
Sound fault
U3250 right speaker power amplifier
Sound fault
U4100 touch control chip
Touch fault
U4150 touch control chip
Touch fault
U4150 touch control chip
Touch fault