Methods of finding substitute components

1. First come to Xunwei www.chinafix.com Download the complete set of circuit diagrams of iPhone and iPad and store them in the same directory.

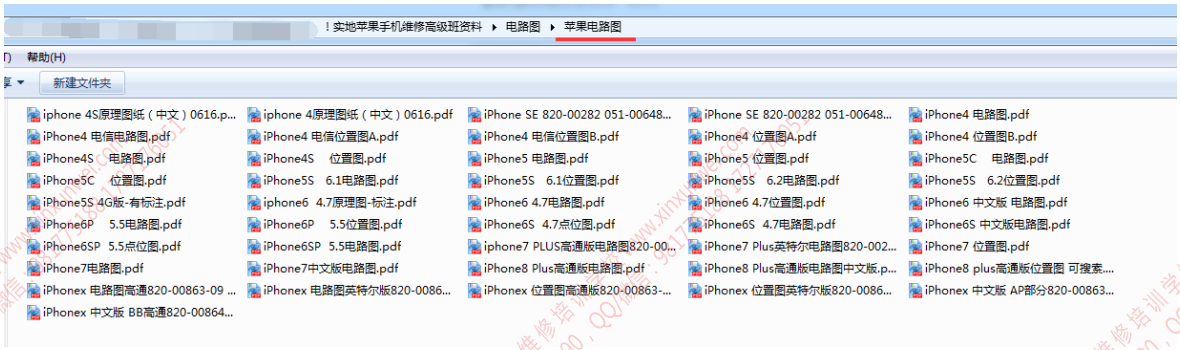

2. Open any circuit diagram and open the search toolbar (the sidebar appears after clicking the telescope)

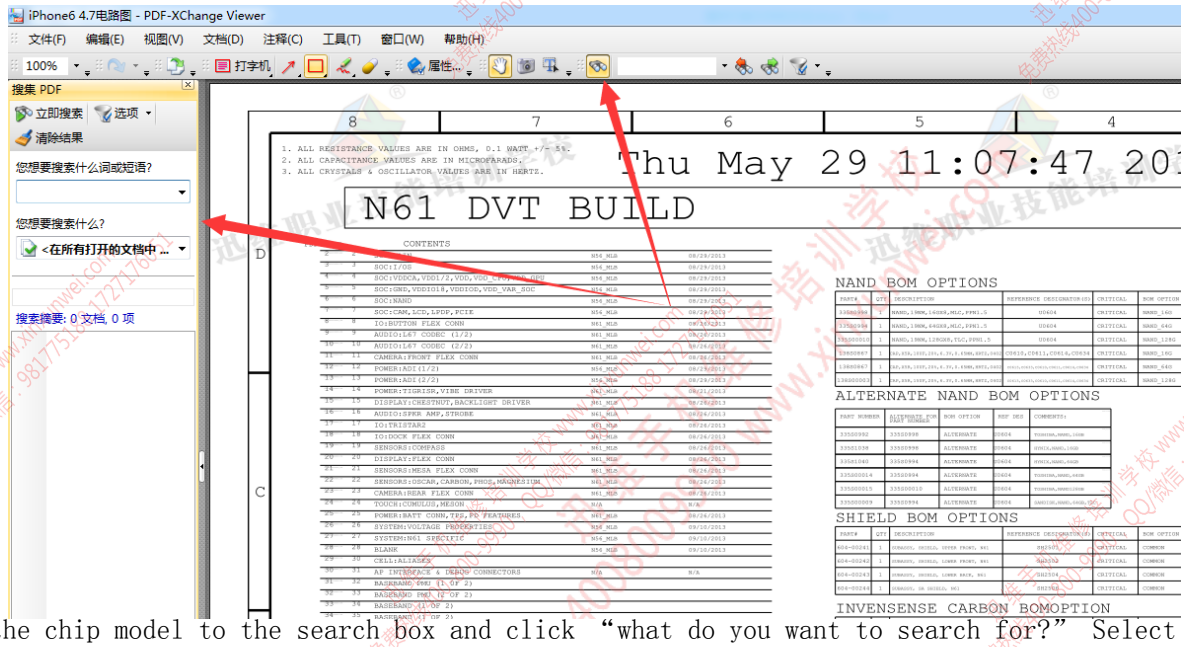

3. Copy the chip model to the search box and click “what do you want to search for?” Select the directory where the circuit diagram is stored.

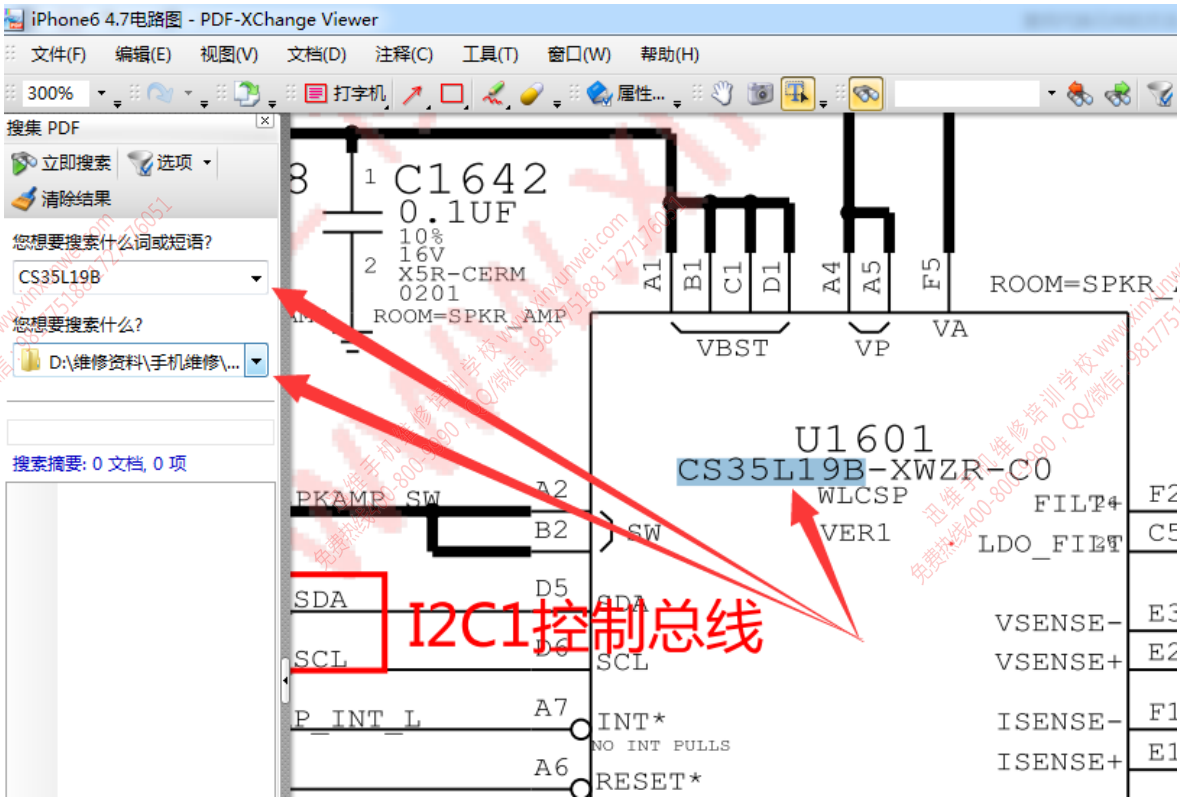

QQ/微信：191686994

4. Click “search now” and wait patiently for the results

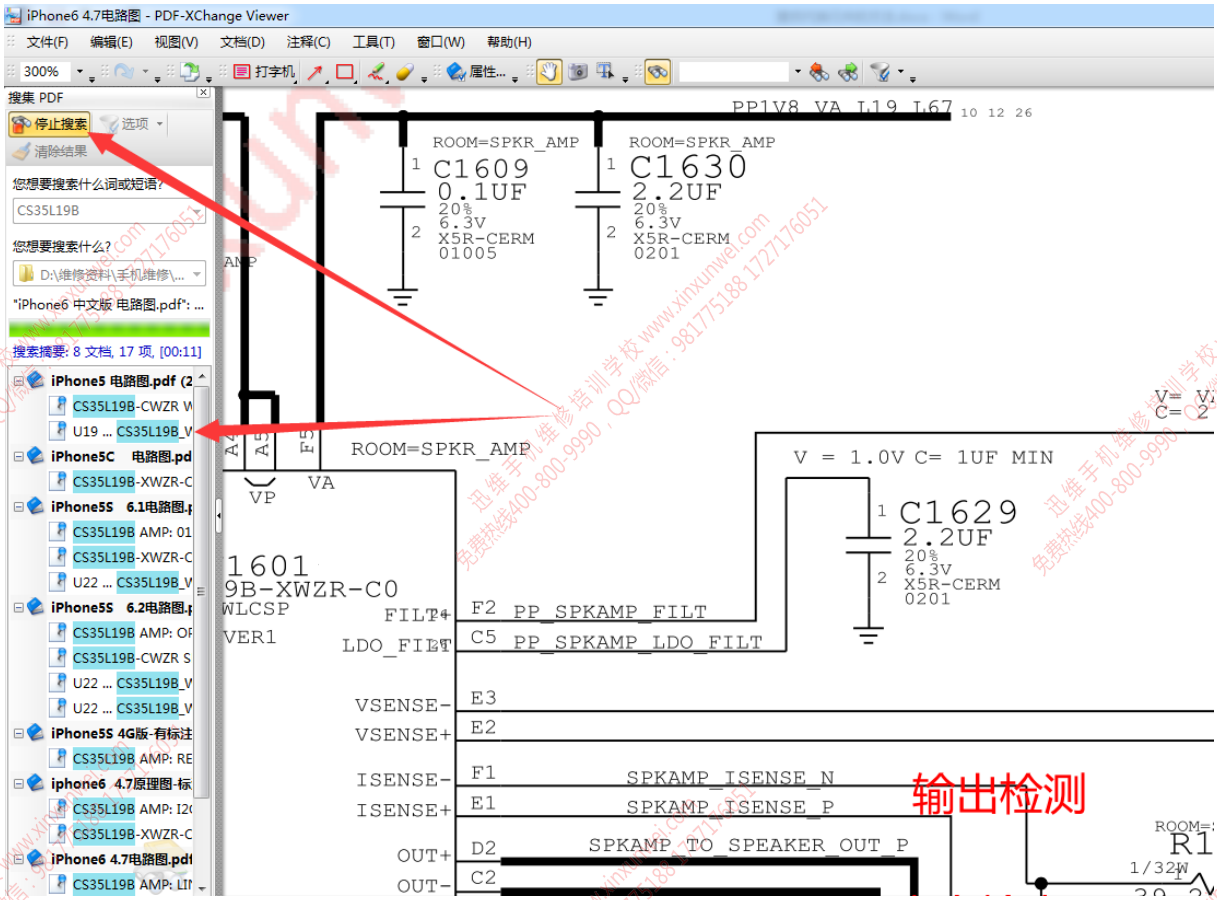

Attached, iPhone & iPad component replacement list:

同颜色为可互换机型		位置号		同颜色为可互换机型		位置号
USB芯片(俗称U2)	5c/5s、air、air2、mini2	U2、U6000、U3500、U1300	向下兼容	音频	5s	U21
	6、6P	U1700			6、6p	U0900
	6S、6SP	U4500			6s、6sp、se	U3500
	7、7P	U4001			7、7p	U3101
	8、8P、X	U6300			8、8p、X	U4700
充电芯片	6、6p	U1401		震动和音频功放	6、6p	U1400
	6s、6sp、se	U2300			6、6p	U1601
	7、7p	U2101			6s、6sp	U3700、U3800
	8、8p、X	U3300			se	U3700
PMU主电源	6、6p	U1202			7、7p	U3301、3402、U3502
	6s、6sp	U2000			8、8p、X	U4900、U5000、U5100
	7、7p	U1801		闪光灯芯片	5s	U17
	8、8p、X	U3700			6、6p	U1602
显示电源	5c、5s	U3			6s、6sp、se	U3300
	6、6p	U1501			7、7p	M2600
	6s、6sp、se	U4000			8、8p	M4100
	7、7p	U3703		BB_PMU基带电源	6、6p、se	U_PMICRF
	8、8P	U5600			6s、6sp	U_PMU_RF
背光芯片	5、5c、5s	U23			7、7p	BBPMU_RF
	6	U1502			8、8P、X	U_PMIC_E、U_PMIC_K
	6p	U1502、U1580		无线网卡	6、6p、se	U5201_RF
	6s、se	U4020			6s、6sp	U5200_RF
	6sp	U4020、U4050			7、7p	WLAN_RF
	7	U3701			8、8p、X	WLAN_W
	7p	U3701、U4601		射频	5c、5s	U3_RF
	8、8P	U5660			6、6p、se	U_WTR_RF
黑触摸	5c、5s	U15			6s、6sp	U_WTR_RF
	6、6p	U2402			7、7p	XCVR0_RF
白触摸	5c、5s	U12			8、8p、X	U_WTR_E、U_WTR_K
	6、6p	U2401		射频功放供电	6/6p/se、air2	U_QPOET、U5901
NAND硬盘	5s、6、6p通用				6s、6sp	U_QPT_RF
	6s、6sp、se、7、7p通用				7、7p	QPOET_RF
	8、8p、X、Xs、XSMAX、XR通用				8、8p、X	U_QET_E、U_QET_K

迅维培训月饼制作

QQ/微信：191686994