iPadNo Power ON repair

[Faulty model] iPadair

[Fault phenomenon] Connecting the computer is dfu mode

[Customer Description] Before it can not be used, the system upgrade caused, after the brush machine can be used normally, but after half an hour and then No Power ON, then Recovery is no longer

[Maintenance process] Before the maintenance, Recovery, Recovery found that the machine can enter the strip, but the progress bar is different every time, but every time it will not be half, it will give an error. In this case, NAND is the most likely. Take the machine apart and take off the NAND

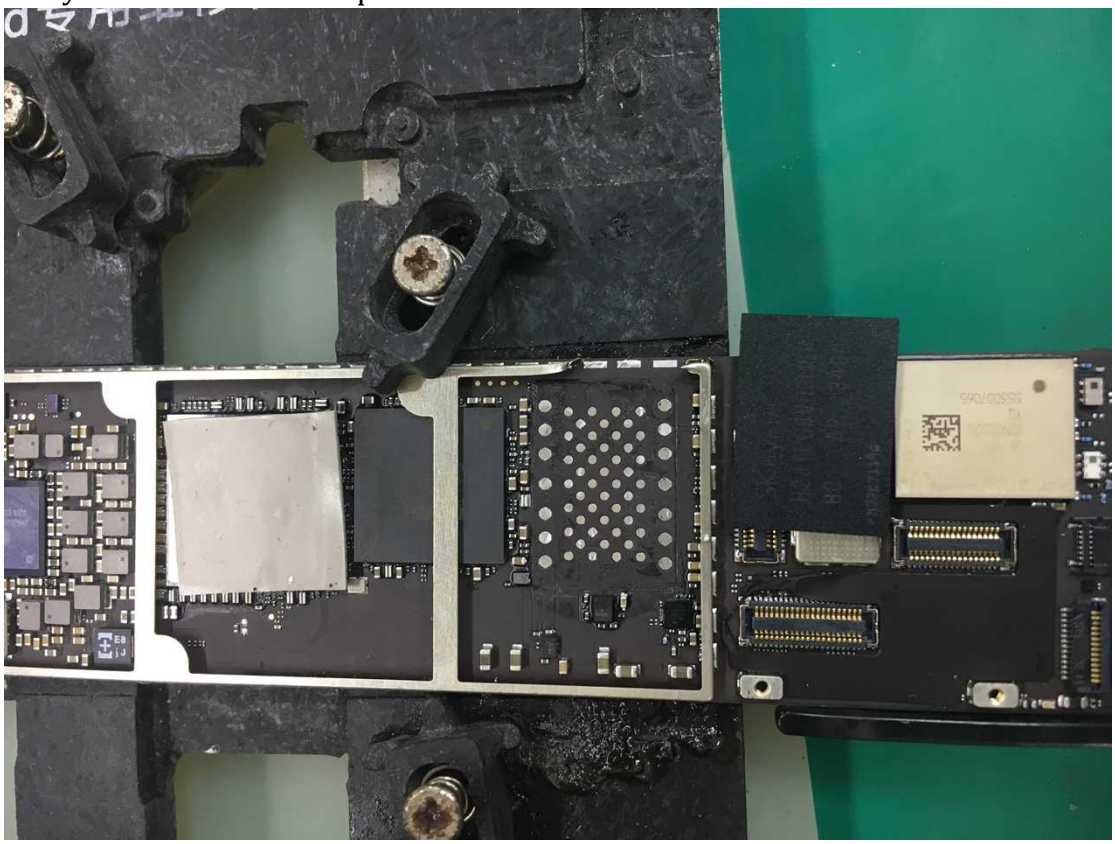

The original NAND is used to read data with the test rack. The data can be read out. Take a new NAND and write the original NAND data to the new disk mounter.

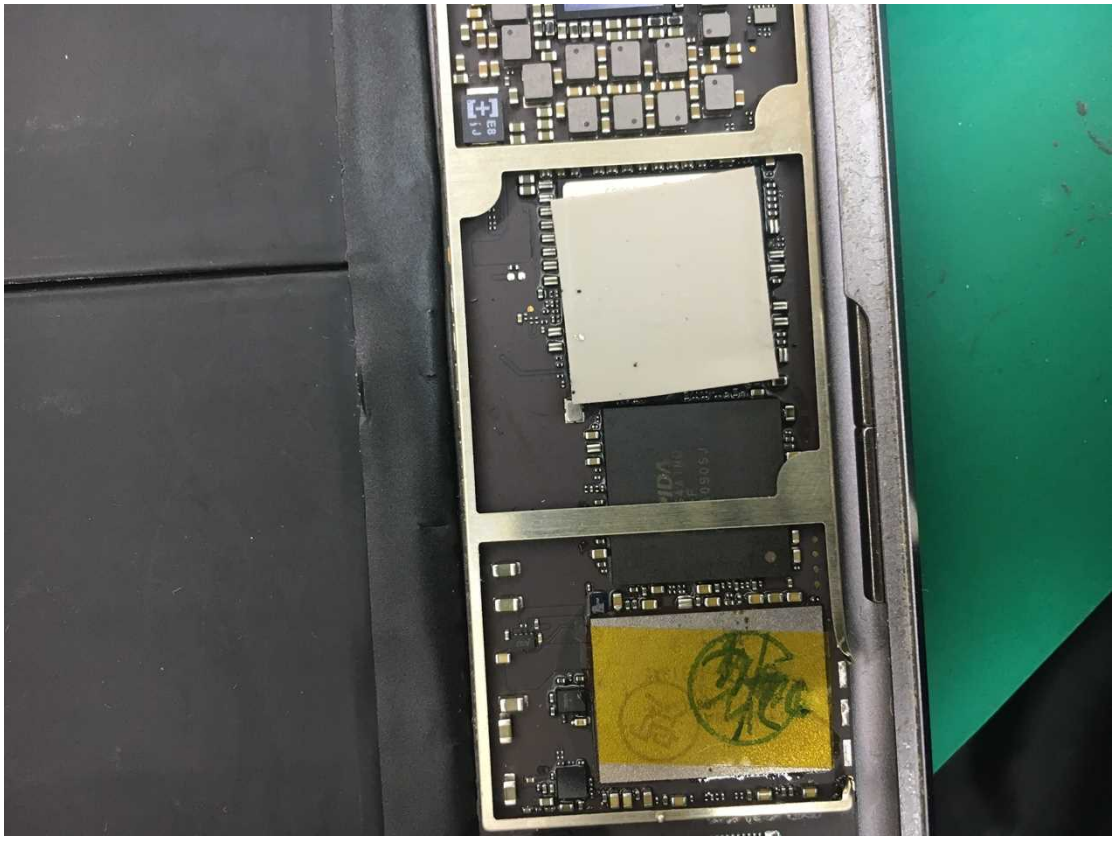

The Recovery machine on the computer can be brushed normally. After the activation, there is no No Power ON problem in normal use.


无 SIM 卡
下午4:02
FaceTime 通话
日历
照片
相机
家庭
视频
提醒事项
iTunes Store
App Store
iBooks